



## PRO-H2SDI Update Guide

1. Make sure the unit is powered off.
2. Connect the unit to your PC/laptop via USB cable from the “SERVICE” port on the front of the unit.
3. Plug in the PSU whilst simultaneously holding down the “SERVICE” button on the front panel.



4. A USB updater drive will appear on your PC/laptop, when it does drag the .BIN firmware file onto it.
5. Wait a short while for the unit to update, when it has completed the update, the unit will automatically reboot.