




Seasons Landscape Collection™ Bollard

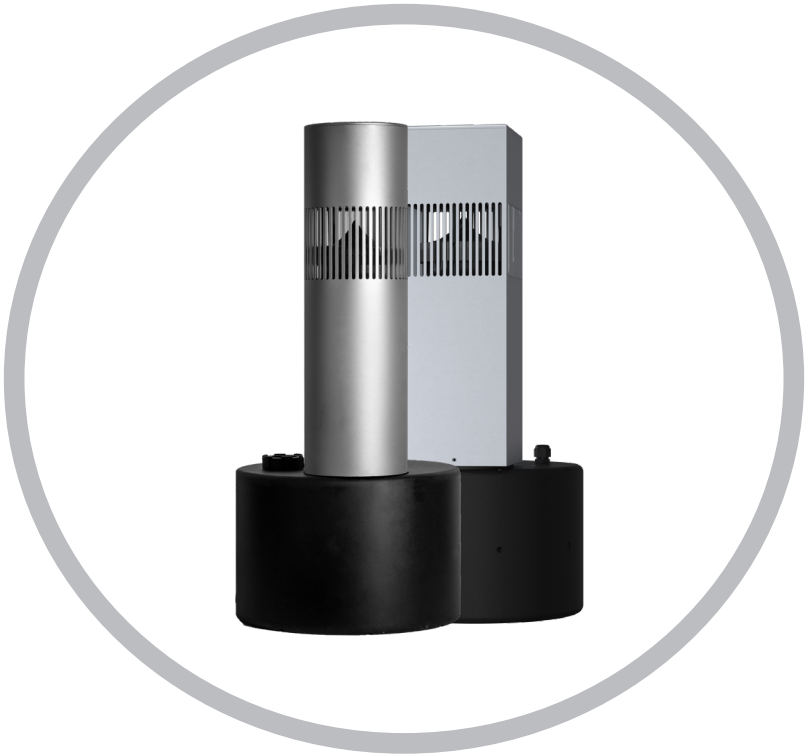

Installation Manual
LSB64

Table of Contents

Introduction -----	1
Models & Specifications -----	2
Items Included -----	2
System Layout -----	3
Installation -----	3
Wiring Options -----	4
Troubleshooting -----	6
Technical Assistance -----	7
Warranty -----	8
Return Process -----	9



INTRODUCTION

Congratulations on selecting one of the finest outdoor speaker systems ever produced. The Origin Acoustics Bollard is a single unit that houses both a subwoofer and a mid/high frequency satellite in the same enclosure. The speaker is designed to allow the subwoofer section to be buried in the ground leaving only the pillar section exposed. The sound from both the sub and satellite emanate from the slots in the upper portion of the pillar section creating a uniform, full frequency sonic experience.

At Origin Acoustics, we take pride in providing you with a high quality product. All of Origin Acoustics' speakers are designed to have excellent sound quality, longevity, and a simple installation process.

This instruction booklet covers the necessary information for a smooth installation, including: the tools you will need, step-by-step instructions for installation, troubleshooting tips for any errors that may occur, and all warranty information.

If for any reason you experience problems or if you have installation questions please call us at (844) 674-4461. Hours of operation are 8:00am to 5:00pm (PacificTime), Monday through Friday.

Models & Specifications

MODEL	LSB64
Woofers	6 ½" Poly Woofer
Midrange	4 ½" Aluminum
Tweeter	½" PEI
Frequency Response	48HZ - 20kHz
Subwoofer Diameter	12 ½" (315mm)
SAT Diameter	5 ½" (140mm)
Power RMS	60W
Power Peak	100W
Impedance	6 Ohm (Sub) / 4 Ohm (Sat)
Mounting Depth	8 ½" (212mm)

Available In:

- Round or Square Shell
- 360° or 180° Sound Dispersion

Bollard SKU	Shell Shape	Shell Color	Sound Dispersion
LSB64RDS360K	Round ●	Silver	360°
LSB64RDS180K	Round ●	Silver	180°
LSB64RDBL360K	Round ●	Black	360°
LSB64RDBL180K	Round ●	Black	180°
LSB64RDBR360K	Round ●	Bronze	360°
LSB64RDBR180K	Round ●	Bronze	180°
LSB64SQS360K	Square ■	Silver	360°
LSB64SQS180K	Square ■	Silver	180°
LSB64SQBL360K	Square ■	Black	360°
LSB64SQBL180K	Square ■	Black	180°
LSB64SQBR360K	Square ■	Bronze	360°
LSB64SQBR180K	Square ■	Bronze	180°

*All product specifications are subject to change. Please refer to the dealer portal for the latest information.

Items Included



Speaker



Wire Nuts (4)



Installation Manual

System Layout

Placement of the speakers throughout the home's exterior will depend on a couple of factors. The first is how uniform of a sound field is required. The laws of physics dictate that the further the listener is from the sound source the lower the apparent sound pressure level or "volume." Because of this there will always be areas with less sound and others with more. A greater number of speakers in the system will always make for more even coverage. The second factor is the desired maximum sound pressure required. Some systems are designed for background or ambient music only, while others are designed to rock the house or provide dance music. Again, the number of speakers will affect the maximum output. Consider creating different zones where louder music is required in one area and softer music in others.

The Bollard also has two dispersion options. One is omnidirectional allowing sound to be projected 360 degrees from the enclosure. The second is accomplished with an insert to limit the sound to half if the dispersion or 180 degrees from the enclosure. This is perfect for border areas where you are concerned about unwanted sound spilling into a neighbor's yard or an area where the music is simply unwanted. The Bollard must be ordered in one of the two configurations as the insert must be installed at the factory. Changing the insert in the field is not an option as doing so would likely damage the unit.

If you are concerned about determining speaker placement, Origin Acoustics offers a free design service to help you map the optimal speaker placements as well as recommended amplifier power and project scale. (Email customerservice@originacoustics.com for more information.)

Installation

Once coverage and sound pressure requirements have been determined the Bollard locations can be selected. Before digging, confirm there are no subterranean obstructions such as water or gas lines, sprinkler pipes or electrical conduits. Holes for the subs should be deep enough to cover the entire lower section of the enclosure with approximately 1-inch of dirt on top of the that section. This will allow the pillar (shell) to protrude about 18-inches above the surface.


NOTE: DO NOT BURY THE ENCLOSURE UNTIL ALL WIRING HAS BEEN COMPLETED. All Subwoofer portion of Bollards will be on a designated wire run and all Satellite portion of Bollards on a separate wire run. The DSP3-700 amplifier from Origin Acoustics was specifically designed to drive Origin's outdoor speaker systems. It is not required, and you can select the amplifier of your choice, but the DSP3-700 offers EQ and crossover presets specifically for the Bollard. These presets have active crossovers that remove the bass from the satellites and send that bass only to the subwoofers. This more effectively controls how the subwoofer interfaces with the satellites and permits you to control the subwoofer-to-satellite balance. The digital signal processing or "DSP" also shapes the sound for both subs and satellites to create optimum performance.

Wiring Options

In a 70V installation the subwoofers and satellites will be run in parallel. This means the positive connection on the amplifier will be connected to the positive connection on speaker 1, 2, 3, etc. The negative connection will be connected to the negative connections on the speakers as well. This can be accomplished with a single pair of wires in a "daisy chain" where the amplifier is at one end and the speakers are connected consecutively. If desired, you can also wire in a star pattern where each speaker is directly wired back to the amplifier.

Also consider whether you will be running the satellites in mono or stereo. In many applications the listener will never be equidistant from a left and right speaker, so mono may be the best option. Regardless, the DSP3-700 offers three independent channels so either option is viable. Remember, if you will be running in stereo you will need to run four wires to each speaker, (+) and (-) for left or right, and sub.

To change the power tap setting, use the tap switch under the cap on the subwoofer.

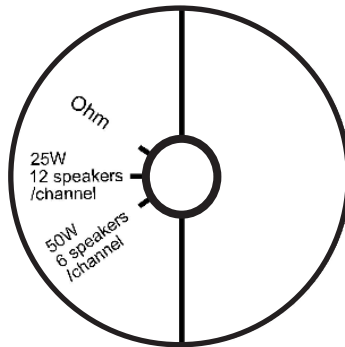

Each pair of wires connecting into the subwoofer and satellite portions of Bollard speaker is labeled as SUB IN and SAT IN respectively.

Sub IN red +
black-

Sat IN white +
green -

We recommend following for the max number of Bollards that can be run.

BOLLARD TAP SWITCH	NUMBER OF BOLLARDS	PER AMPLIFIER
SETTING	MAX #	RECOMMENDED
6 Ω (Sub) / 4 Ω (Sat)	2	DSP3-100
50W (70V)	12	DSP3-700
25W (70V)	24	DSP3-700

In the Ohm (Ω) tap switch position, the transformers are bypassed. Due to the impedance in the 6 Ω (Sub) / 4 Ω (Sat) setting, only a single pair of Bollards can be used. If you are looking to use more than two Bollard speakers, 70V is the proper solution.

Troubleshooting

If you have a problem, try isolating it first. For example, if you're playing a DVD and there is no sound, try replacing the DVD with an MP3 player to see if you get sound. If it does work, then the problem is with the television, DVD player, or the cables connecting them. If it doesn't work, the problem will be with the amplifier, speakers, or those cables.

Problem	Possible Cause
No Sound	The volume may be turned down or muted. Check the volume settings on both the amplifier and the DVD player/television/computer/etc.
No Sound	Make sure the proper source is selected on the amplifier or receiver.
No Sound	Check the cord connecting the amplifier with the source. The cord may be damaged or plugged into the wrong input or output.
No Sound	Check the wires connecting the amplifier with the speakers. Make sure they're connected properly and not damaged in any way.
Poor Sound Quality	If you hear something like static, or the sound is cutting in and out, check the audio cables. If the problem increases when a cable is being moved, then the cable is most likely faulty or not connected properly.
Poor Sound Quality	Today's audio systems may have several places to adjust the volume, for example your MP3 player may have a volume control, and your amplifier may also have one. Check to be certain that the volume isn't turned up past 80% on any device.
Poor Sound Quality	Try changing sources to be certain that the selection you've chosen is a good quality recording.

Technical Assistance

If you have any questions or concerns about installing or using this product, you can reach us through one of the following methods:

Phone: (844) 674-4461

Hours of operation: 8:00am - 5:00pm (Pacific Time), Mon - Fri

Email: techsupport@originacoustics.com

If you are having technical trouble, please include the model number and briefly explain what steps you took to resolve the problem in your email, or be prepared to answer these questions over the phone. If you are considering returning the product, it's required that you contact Origin Acoustics prior to any return attempts. This way we can determine if the issue can be resolved without returning the product, or if needed we can provide instructions and support for the return process.

Limited 5 Year Warranty

Origin Acoustics warrants to the original retail purchaser only that this Origin Acoustics product will be free from defects in materials and workmanship, provided the speaker was purchased from an Origin Acoustics authorized dealer.

If the product is determined to be defective, it will be repaired or replaced at Origin Acoustics' discretion. If the product must be replaced yet it is no longer manufactured, it will be replaced with a model of equal to or greater value that is the most similar to the original. If this is the case, installing the replacement model may require mounting modifications; Origin Acoustics will not be responsible for any such related costs.

Requirements & Warranty Coverage

This warranty may not be valid if the product was purchased through an unauthorized dealer. This warranty only applies to the individual that made the original purchase, and it cannot be applied to other purchases. The purchaser must be prepared to provide proof of purchase (receipt). This warranty will not be valid if the identifying number or serial number has been removed, defaced, or altered.

***All warranties and warranty conditions are subject to change. Please refer to www.originacoustics.com for the latest information.**

Not Covered by Warranty

- Accidental damage
- Damage caused by abuse or misuse
- Damage caused by attempted repairs/modifications by anyone other than Origin Acoustics or an authorized dealer
- Damage caused by improper installation
- Normal wear, maintenance, and environmental issues
- Damage caused by voltage inputs in excess of the rated maximum of the unit
- Damage inflicted during the return shipment

Return Process

Before making any return attempts, it is required that you first contact Origin Acoustics. Return product to Origin Acoustics or your dealer, either in person or by mail. It's preferable if the product is returned in the original packaging. If this isn't possible, the customer is responsible for insuring the shipment for the full value of the product.

This warranty is in lieu of all other expressed or implied warranties. Some states do not allow limitations on implied warranties, so this may not apply depending on the customer's location. (For more information, see Magnuson-Moss Warranty Act.)



6975 S Decatur BLVD, Las Vegas, NV 89118 • www.originacoustics.com • 844-674-4461

©2018 Origin Acoustics. All copyrighted, trademarked and patented elements mentioned herein are the sole property of Origin Acoustics.